

(d) Each heater for bulkhead mounting must have its top slanted or otherwise designed to prevent hanging anything on the heater. If a heater is portable, it must have a clip or bracket to hold the heater in a fixed position.

(e) The external temperature of a heater enclosing case must not be over 125 degrees C, except that the external temperature of the enclosing case of a flush-mounted heater must not be over 100 degrees C. If a heater is mounted on or next to a deck or bulkhead, the heater must not cause the temperature of the nearest deck or bulkhead to be over 55 degrees C. For test purposes, an ambient temperature of 25 degrees C must be used.

[CGD 74-125A, 47 FR 15236, Apr. 8, 1982, as amended by CGD 94-108, 61 FR 28283, June 4, 1996; 61 FR 33045, June 26, 1996; 61 FR 36608, July 11, 1996; USCG-2003-16630, 73 FR 65199, Oct. 31, 2008]

### **Subpart 111.91—Elevators and Dumbwaiters**

#### **§ 111.91-1 Power, control, and interlock circuits.**

Each electric power, control, and interlock circuit of an elevator or dumbwaiter must meet ASME A17.1 (incorporated by reference; see 46 CFR 110.10-1).

[USCG-2003-16630, 73 FR 65199, Oct. 31, 2008]

### **Subpart 111.95—Electric Power-Operated Boat Winches**

#### **§ 111.95-1 Applicability.**

(a) The electric installation of each electric power-operated boat winch must meet the requirements in this subpart, except that limit switches must be adapted to the installation if there are no gravity davits.

(b) The provisions of this subpart supplement the requirements for boat winches in other parts of this chapter under which vessels are certificated and in subchapter Q, Equipment approvals.

[CGD 74-125A, 47 FR 15236, Apr. 8, 1982, as amended by CGD 94-108, 61 FR 28283, June 4, 1996]

#### **§ 111.95-3 General requirements.**

(a) Each electrical component (e.g., enclosure, motor controller, or motor) must be constructed to the appropriate NEMA or IEC degree of protection requirement for the service and environment in which it is installed.

(b) Each main line emergency disconnect switch, if accessible to an unauthorized person, must have a means to lock the switch in the open-circuit position with a padlock or its equivalent. The switch must not lock in the closed-circuit position.

[CGD 94-108, 61 FR 28283, June 4, 1996]

#### **§ 111.95-7 Wiring of boat winch components.**

(a) If the motor controller of a boat winch power unit is next to the winch, the main line emergency switch must disconnect all parts of the boat winch power unit, including the motor controller and limit switches, from all sources of potential. Other power circuit switches must be connected in series with the main line emergency switch and must be ahead of the motor controller. The main line emergency switch must be the motor and controller disconnect required by Subpart 111.70 and must have a horsepower rating of at least that of the winch motor.

(b) If the motor controller of a boat winch power unit is remote from the winch, there must be a switch at the controller that can disconnect the entire winch electric installation from all sources of potential. The switch must be in series with and on the supply side of the main line emergency switch.

(c) Each davit arm limit switch, whether connected in the power circuit or in the control circuit, must disconnect all ungrounded conductors of the circuit controlled.

(d) If one motor is used with two winches, there must be a main line emergency switch, a clutch interlock switch, and a master switch for each winch, except that a single main line emergency switch located as required by paragraph (e) of this section may be used for both winches. The main line emergency switches must be connected, in series, ahead of the motor controller. The master switches must be connected in parallel and each, in